



# Krups 963 Gasket Replacement

Replacing the top gasket on your coffee maker to stop a steam leak.

Written By: Wyatt Hall





## TOOLS:

- [Phillips #2 Screwdriver](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Removing Bottom Screws




- ⚠ Make sure the device is unplugged before continuing.
- Use a Phillips size 2 screwdriver to remove the four 12mm screws found on the bottom of the machine.

## Step 2




- Remove the single black Phillips size 0 10mm length screw on the back of the machine.

## Step 3

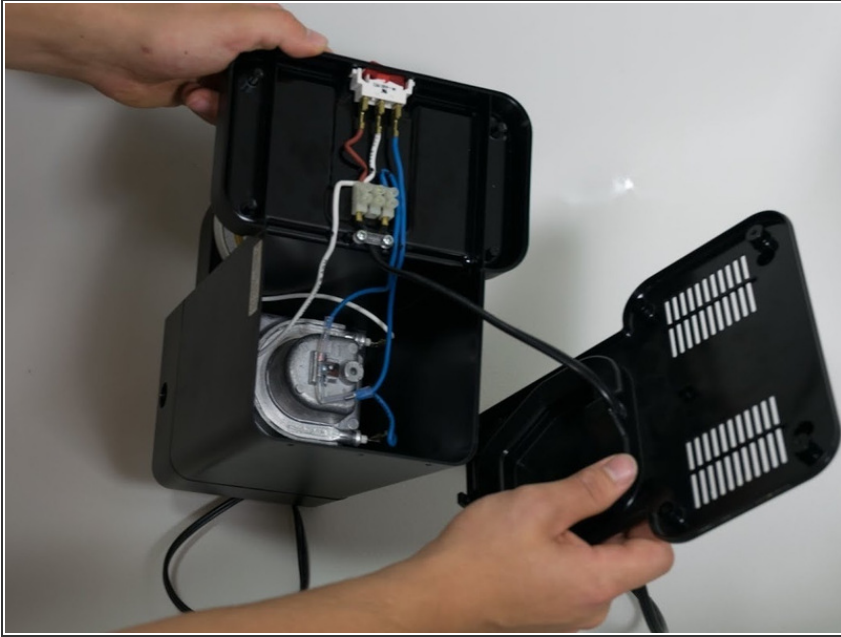

- Remove the bottom cover from the machine and slide it down the power cord.

## Step 4 — Top Cover

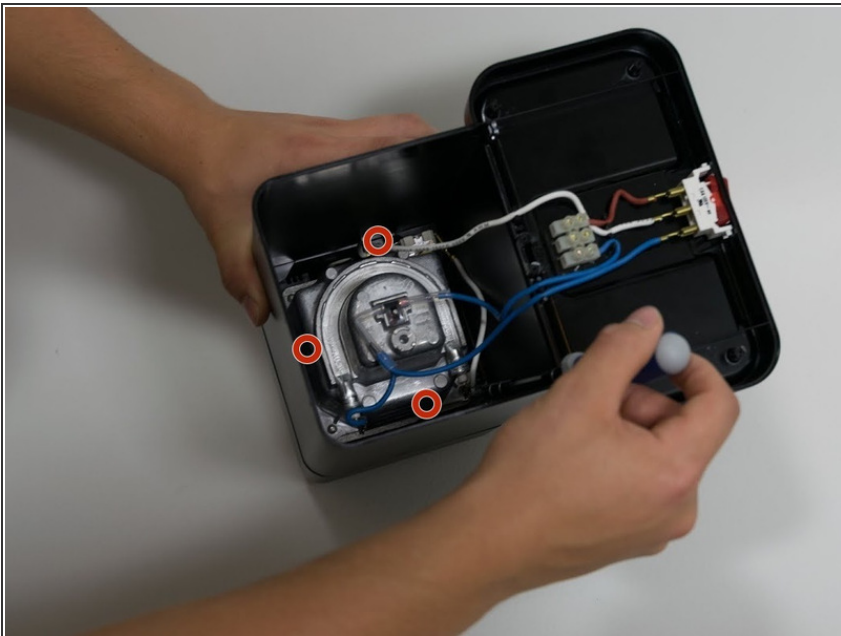


- Remove the three 60mm Phillips size 0 screws holding the top cover on.

## Step 5



- Remove the top cap of the machine by turning it in a counter-clockwise motion.

## Step 6

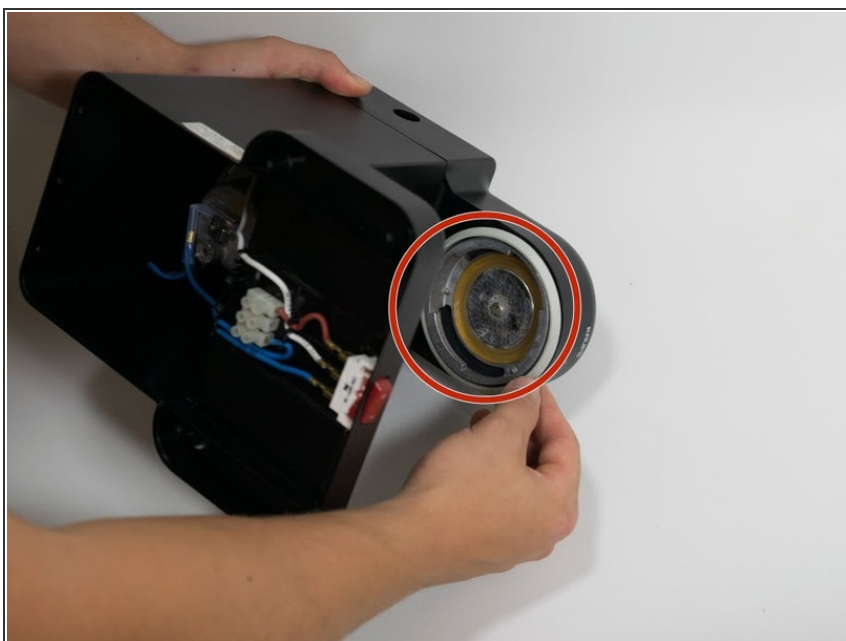

- Remove the grey plastic ring from the rim of the filter basket holder.



## Step 7



- Lift and remove the top black plastic cover from the machine.

## Step 8 — Gasket Replacement



- Grab the gasket and pull up until it is removed from the machine.

To reassemble your device, follow these instructions in reverse order.